


Adjusting the gun for proper coin size.


1. Remove the gun's covers by unscrewing all bolts.
2. Loosen the two screws to adjust the coin shell.

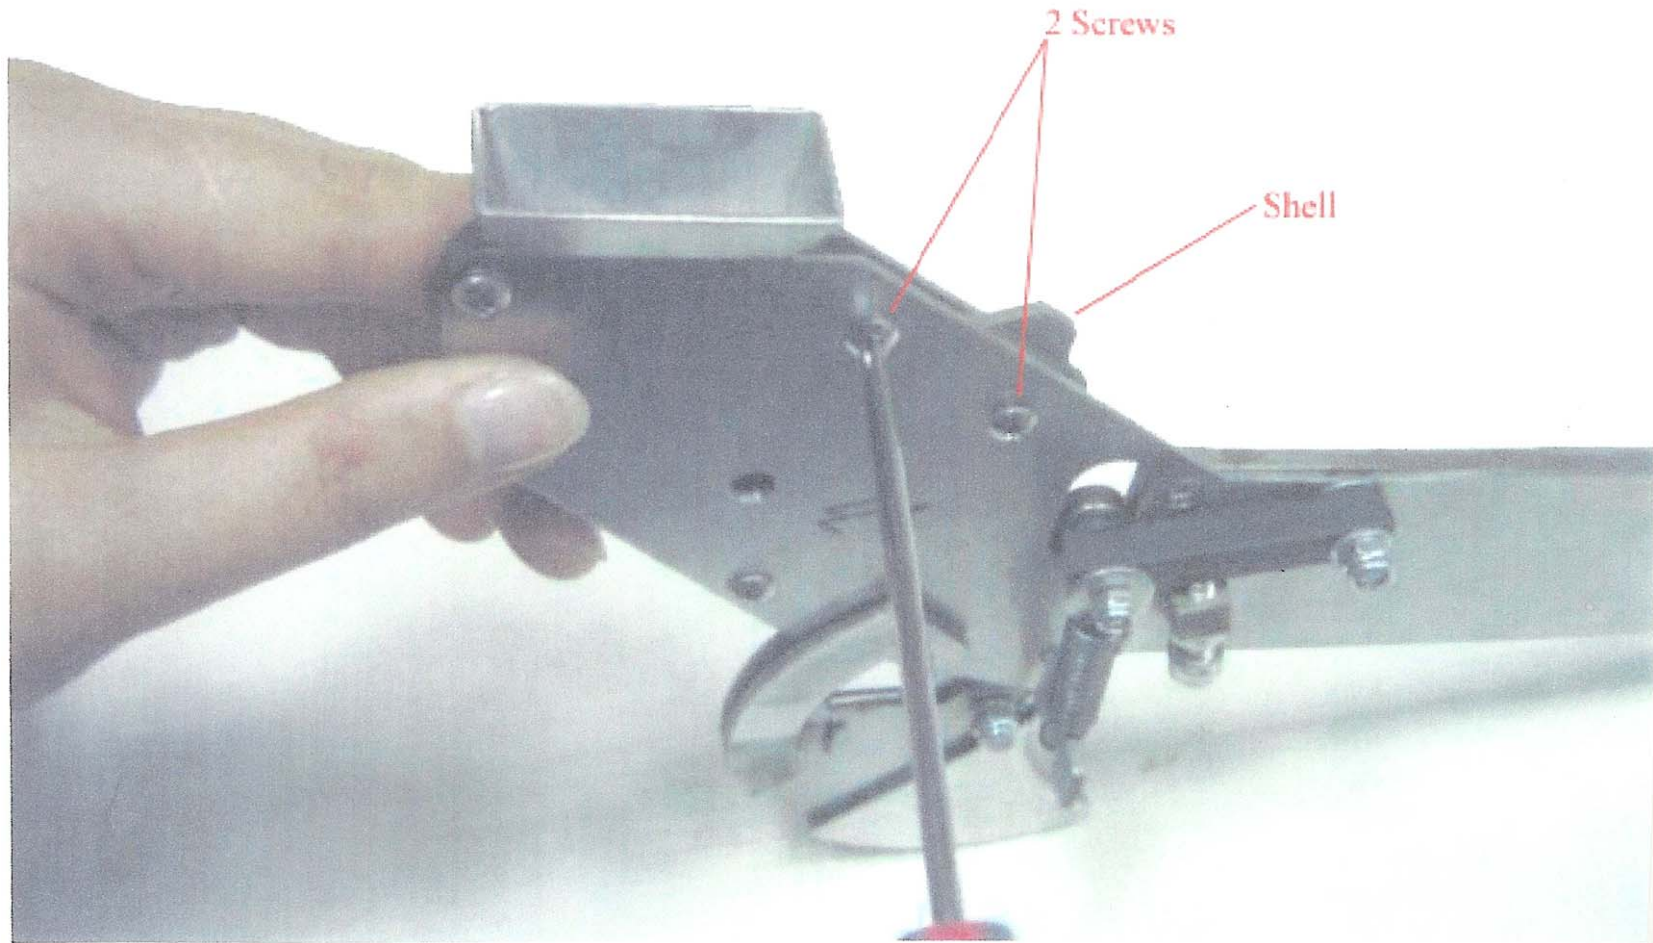


Measure the coin's size that you want to use. This is the area that you will adjust to the same size

This is the shell that is used to adjust the max coin size.

Adjust the shell and tighten the 2 screws when finished

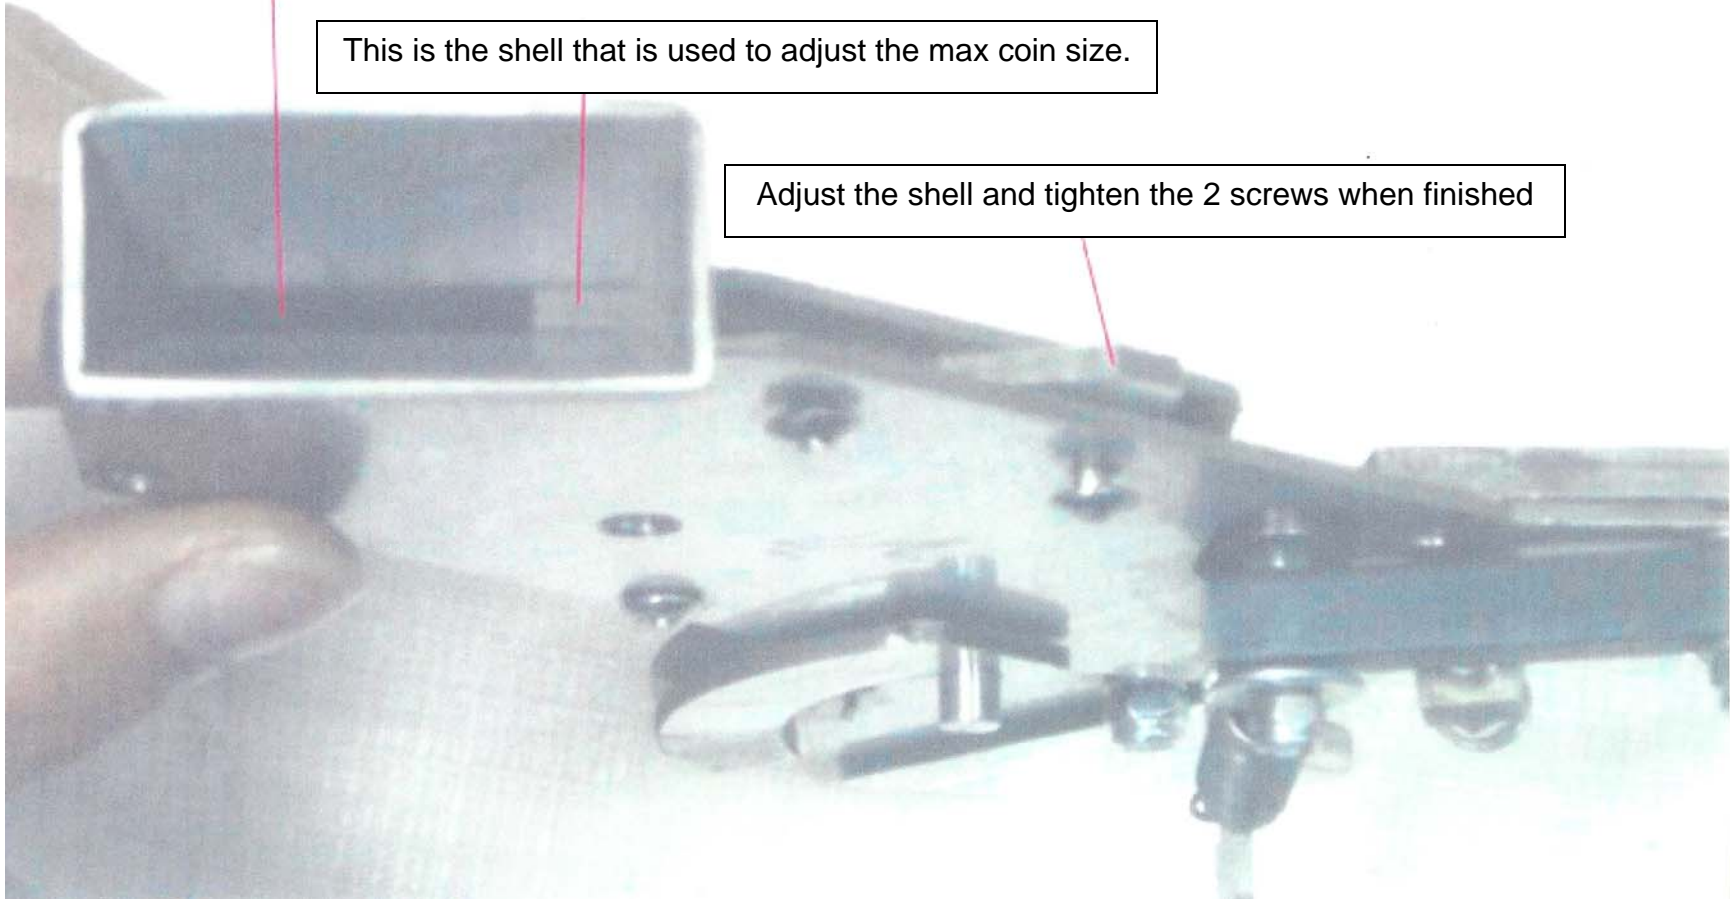

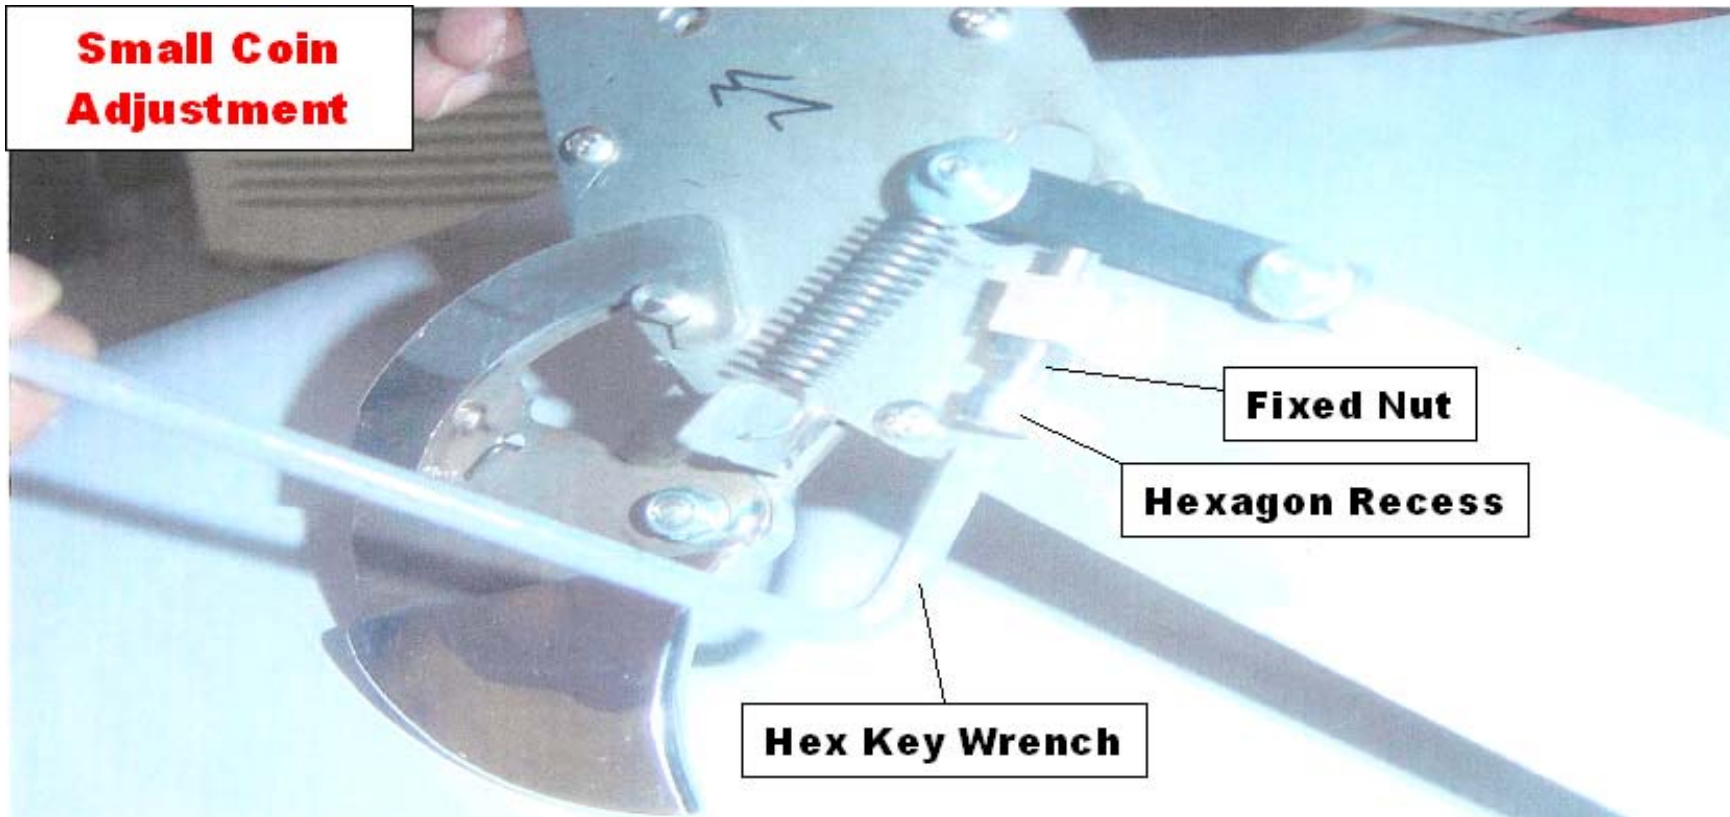

Loosen the fixed nut and turn the hex bolt counter clockwise to adjust for the smaller coins

1. Insert a smaller coin and see whether it will pass through the gun without shooting the gun. When the adjustment is correct, tighten the fixed nut.

Note:

When a smaller coin is inserted into the gun and the gun is properly adjusted the coin will roll out of the gun and fall down on the playfield. The proper size coin will be allowed to shoot out of the gun to knock over targets.